



Mac Mini Late 2014 Drive Tray Assembly Replacement

Prereq to remove the hard drive and SSD tray.


Written By: Sam Lionheart



INTRODUCTION

Prerequisite only.

Step 1 — Drive Tray Assembly

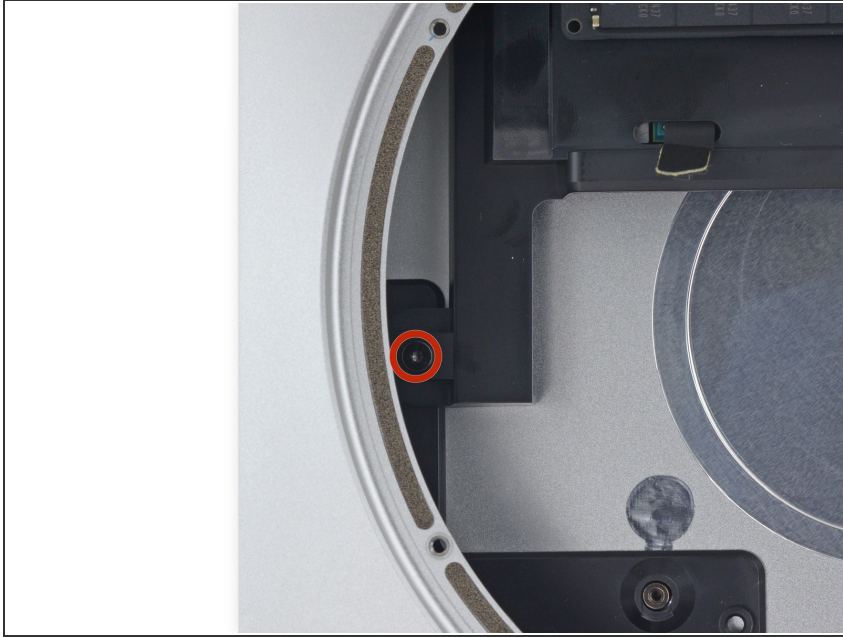

- Remove the single 8 mm T6 screw securing the drive tray.

Step 2



- Lift the drive tray up out of the Mac Mini.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-11-03 12:46:39 AM.